CODING INSTRUCTIONS

Steel-line ZT-07



WHERE IS MY CODING BUTTON?



HOW TO CODE YOUR REMOTE

- Press the hold the "P" and "+" buttons until all lights turn on and LED 7 flashes.
- Press the "+" button once. (all LED lights turn off except LED 7).
- Quickly press and release the desired button on your remote twice. (All LED lights turn on and LED 7 will begin flashing.)
- Press the "P" button once to save. (LED 3 will switch on indicating a successful code.

HOW TO ERASE CODED REMOTES

- Press and hold the "P" and "+" buttons until all lights turn on and LED 7 flashes.
- Press and hold the "-" button until LED 7 turns off and begins flashing again.
- Press the "P" button once to save. (LED 3 will switch on indicating all codes have been deleted.)

