

CODING INSTRUCTIONS

B&D TB-7V1, TB6, WTB6, TB5



CHOOSING A BUTTON

You can use any of the four buttons to activate your door. If you have multiple doors, you can code the other three buttons to the other doors provided they are compatible motors.

HOW TO CODE

Press the CODE SET button and release, the LED will illuminate to indicate the opener is in Code Learn Mode. Press the desired remote button and the LED will begin to flash, press the desired remote button again. The LED will now illuminate for 1 second and then go out. This shows the remote is coded.

HOW TO ERASE CODED REMOTES

Press and hold the CODE SET button for 6 seconds. The LED will blink rapidly for 1 second to indicate that all codes have been erased.

This will erase all remotes from the machine

HOW TO REPLACE THE BATTERIES IN YOUR REMOTE

Insert 1x CR2032 Battery positive side up.

To replace batteries use a screwdriver to remove the screw, the silver panel will come out. Use the screwdriver to lever the back of the case off revealing the battery cage. Slide the old battery out and replace.